

FIG. 1 (PRIOR ART)

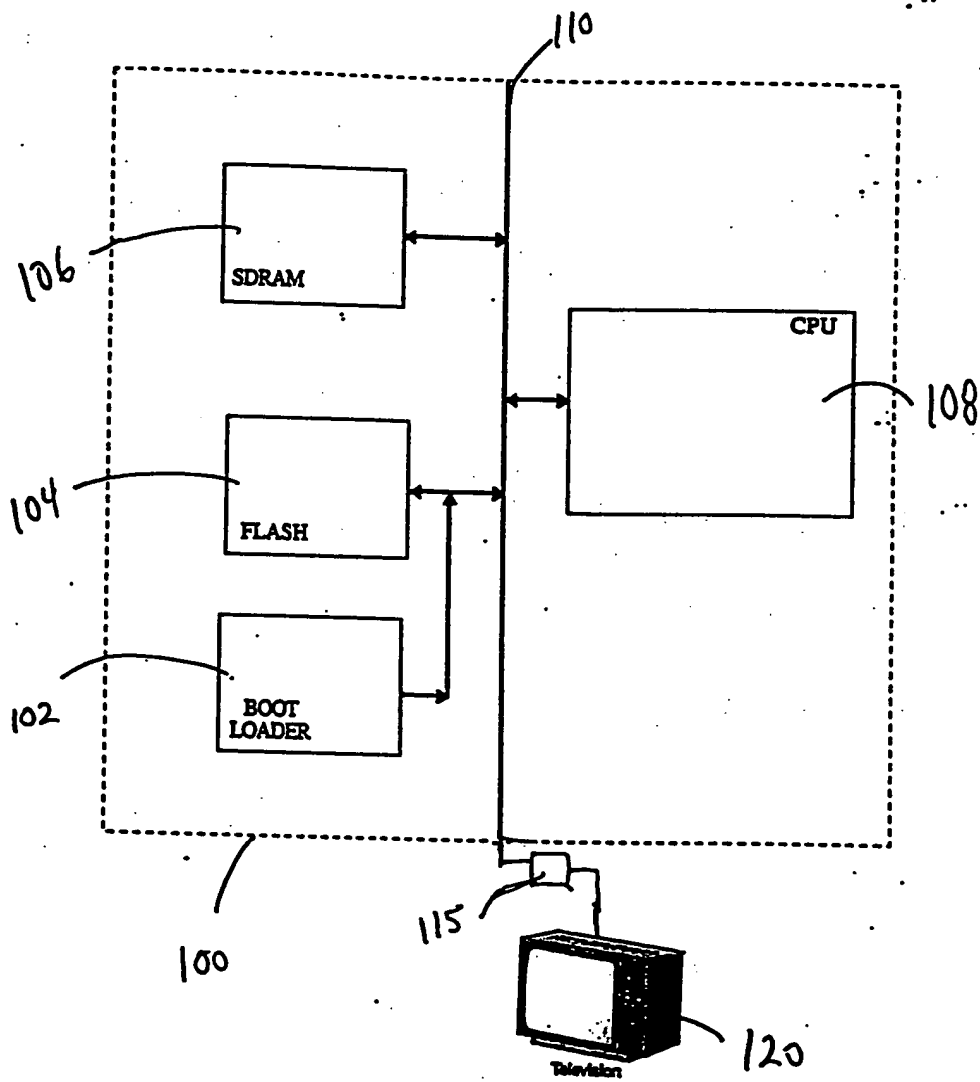


FIGURE 1
(PRIOR ART)

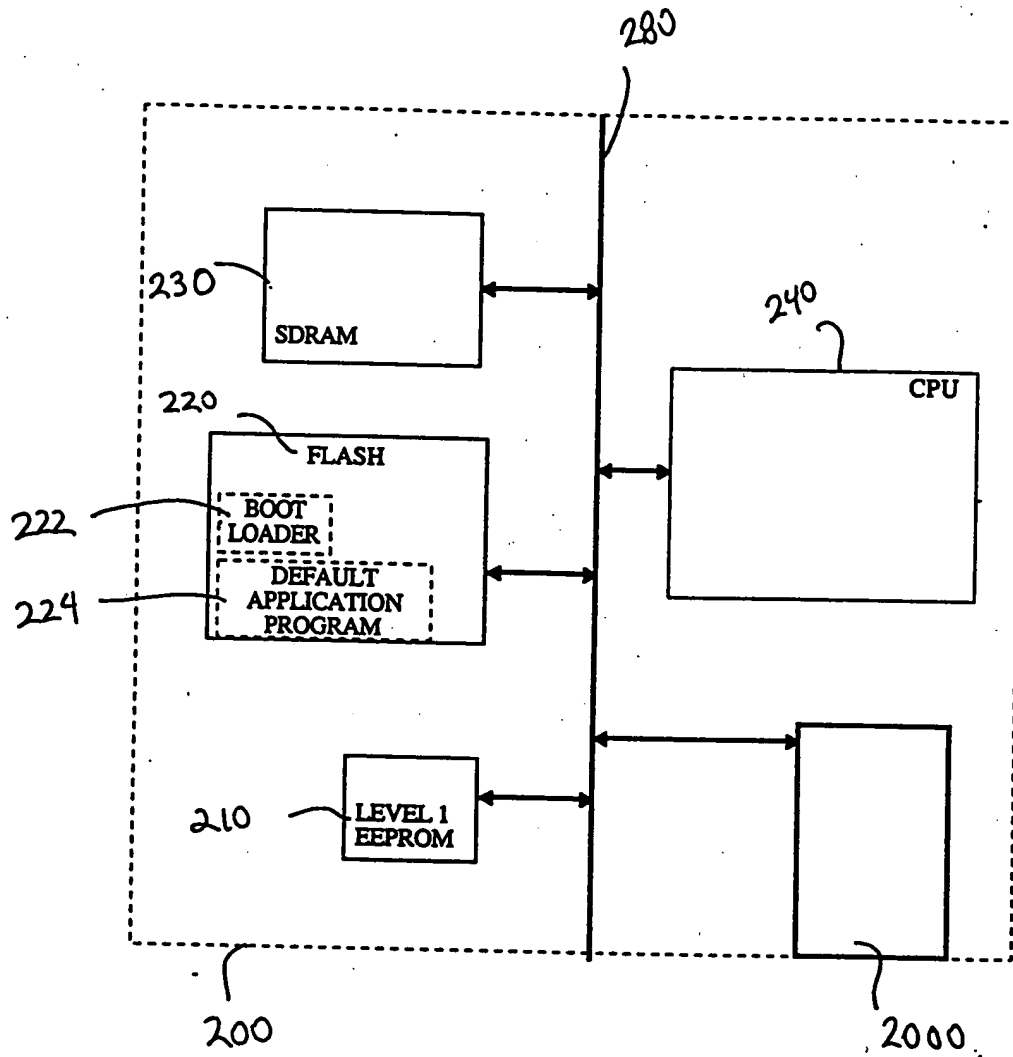


FIGURE 2

FIG. 3

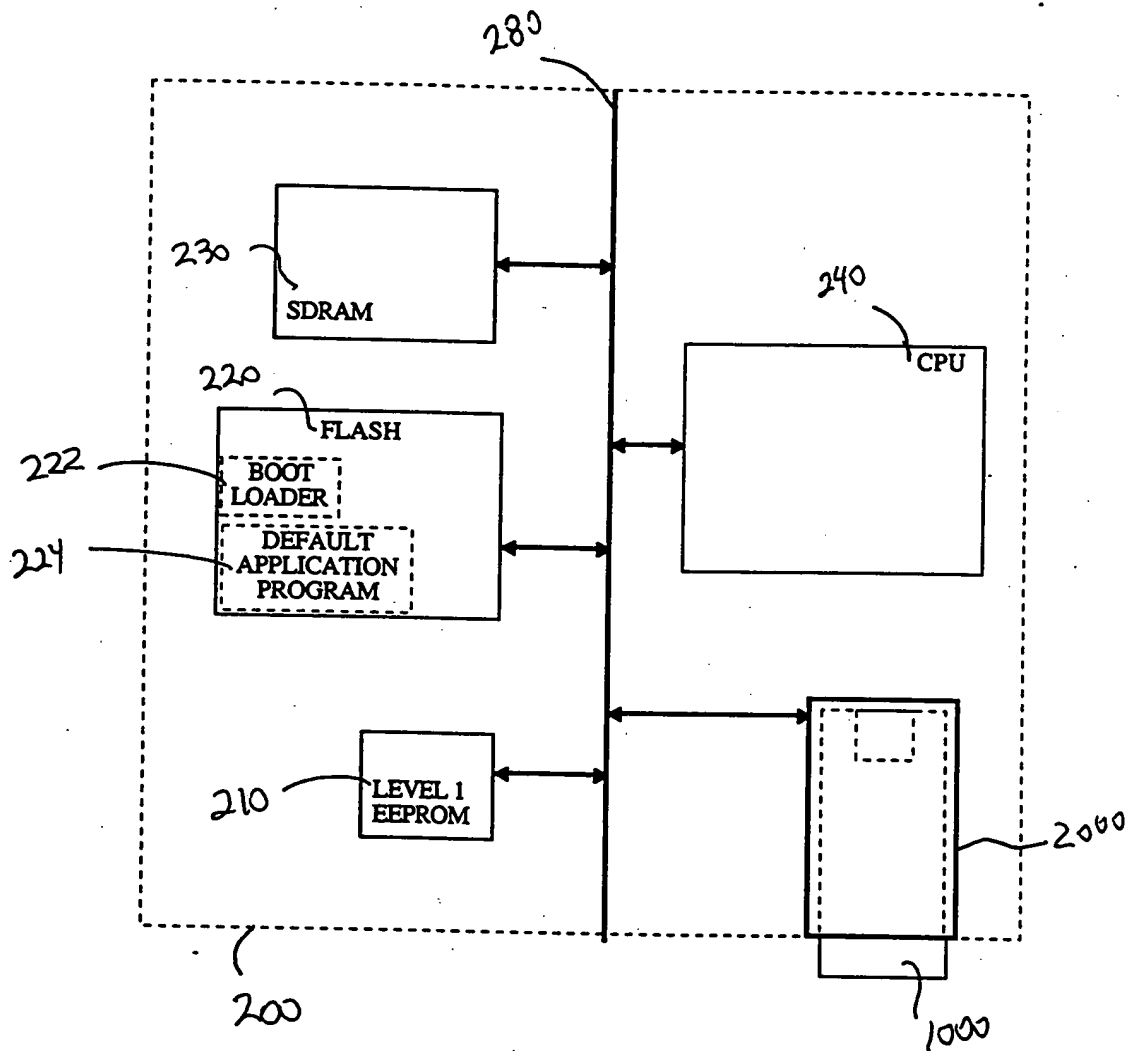


Figure 3

FIG. 4

400

220

FLASH

BOOT LOADER PROGRAM

0x00400000

222

DEFAULT
APPLICATION
PROGRAM

0x00000000

224

Figure 4

002216101001

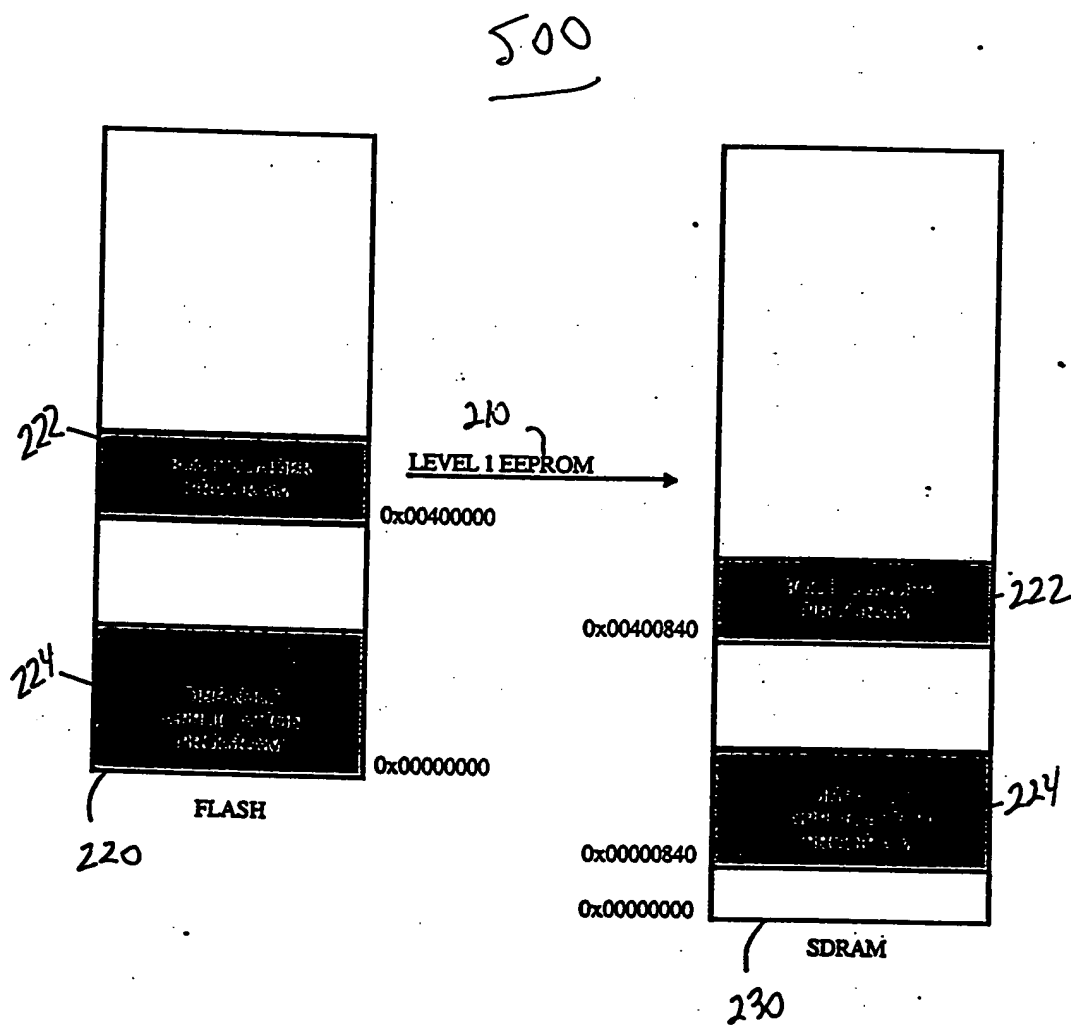


Figure 5

09727193-024204

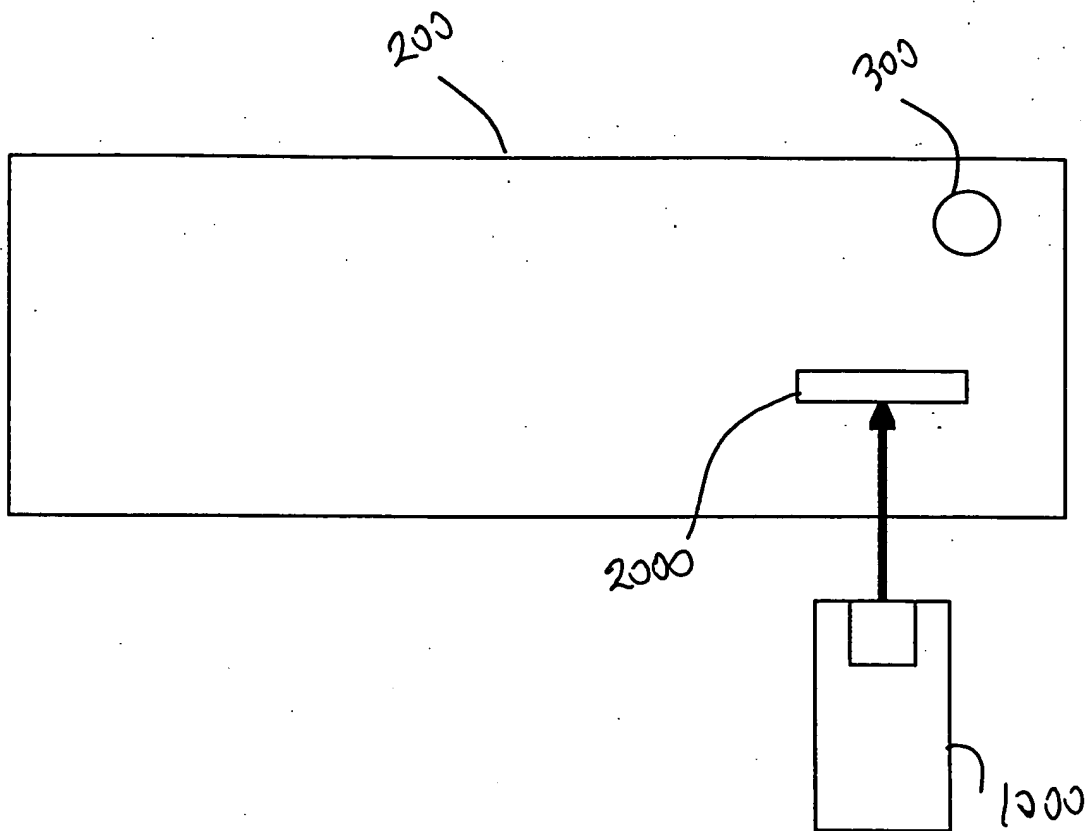


FIGURE 6

TOP SECRET

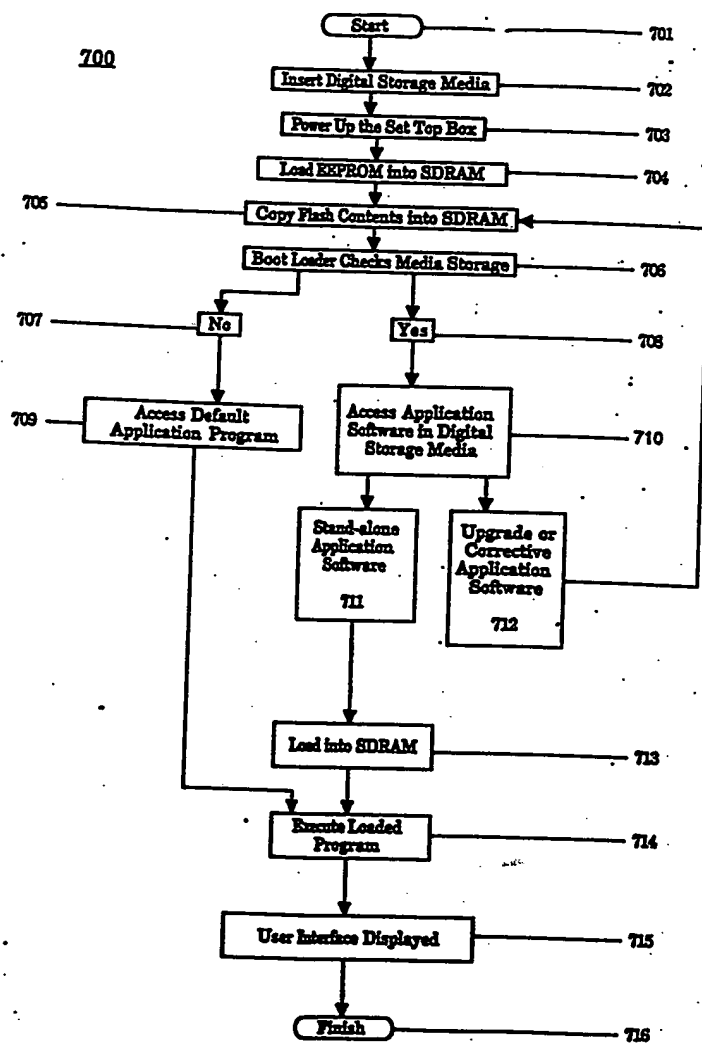


Figure 7